







DE | EN | ES | IT | FR | NL | DA

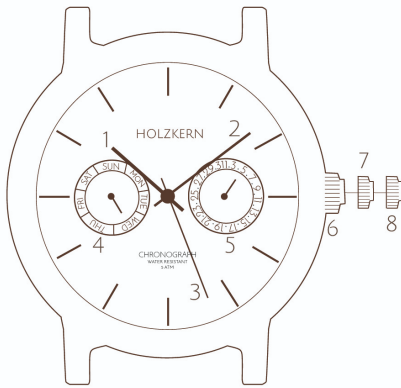


- 1 Hour | Stunde
- 2 Minute | Minute
- 3 Second | Sekunde
- 4 Day | Tag
- 5 Date | Datum
- 6 Normal position | Normalposition
- 7 1st click | 1. Position
- 8 2nd click | 2. Position

<p>Battery Batterie SR920SW</p> <p>Movement Uhrwerk Quartz movement Quarzuhrwerk Seiko VH64</p> <p>Water resistance Wassersäule Splash-proof Spritzwasserfest</p> <p>Glass Glas Mineral crystal Mineralglas</p> <p>Case thickness Gehäusehöhe 12 mm</p> <p>Weight Gewicht 145 g</p> <p>Caseback Rückseite Gehäuse Metal, Glass Metall, Glas</p>	<p>Circumference Umfang Adjustable length Größenverstellbar</p> <p>Band width Armbandbreite 20 mm</p> <p>Band Armband Metal, wood Metall, Holz Clasp pin Spangennstift</p> <p>Closure Verschluss Deployant clasp with fine adjustment Klappverschluss mit Feineinstellung</p> <p>Case connection Gehäuseverbindung Spring pin with lever Federstift mit Hebel</p> <p>luminescent lumineszierend hands Zeiger</p>
--	--

<p>Instructions Band Anleitung Armband Instrucciones para la correa Istruzioni per il cinturino Instructions pour le bracelet Instructies Horlogeband Instruktioner rem</p>	
	<p>EN: www.holzkern.com/en/faq/#size</p> <p>DE: www.holzkern.com/de/faq/#size</p> <p>ES: www.holzkern.com/es/faq/#size</p> <p>IT: www.holzkern.com/it/faq/#size</p>
	<p>FR: www.holzkern.com/fr/faq/#size</p> <p>NL: www.holzkern.com/nl/faq/#size</p> <p>DA: www.holzkern.com/da/faq/#size</p>

	<p>Accuracy/Month Genauigkeit/Monat</p>	<p>± 20 sec. ± 20 Sek.</p>		<p>Battery life Batterie Lebensdauer</p>	<p>2 Years 2 Jahre</p>
---	--	--------------------------------	---	---	----------------------------

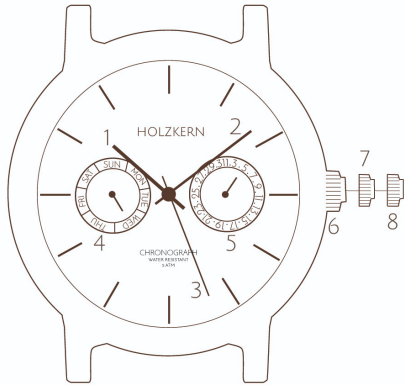

- 1** Hour | Stunde
- 2** Minute | Minute
- 3** Second | Sekunde
- 4** Day | Tag
- 5** Date | Datum
- 6** Normal position | Normalposition
- 7** 1st click | 1. Position
- 8** 2nd click | 2. Position

Setting the time and day

To set the time and day, pull the crown out to the 2nd Position when the second hand is at 12:00. Then turn the crown to set the day of the week. After setting the day, set the current time. Once you are done, push the crown back to normal position and the watch begins to run.

Setting the date

To set the date, pull the crown out in position one and turn the crown counterclockwise. After the date has been set, push the crown back to the normal position.

*Don't set the date between 22:00 and 02:00 (the date may not change the next day).

Uhrzeit und Wochentag einstellen

Um die Uhrzeit einzustellen, ziehe die Krone sanft raus bis in Position 2, wenn der Sekundenzeiger auf 12:00 steht. Drehe dann die Krone, um den Tag einzustellen. Danach stelle den Stunden- und Minutenzeiger ein. Nach dem Einstellen drücke die Krone wieder in Normalposition.

Datum einstellen

Ziehe die Krone in Position 1 um das Datum einzustellen. Zum Einstellen des Datums drehe die Krone gegen den Uhrzeigersinn. Drücke danach die Krone wieder in Normalposition zurück.

*Stelle das Datum nicht zwischen 22:00 und 02:00 Uhr ein (das Datum stellt sich sonst am nächsten Tag nicht richtig um).



Accuracy/Month
Genauigkeit/Monat

± 20 sec.
± 20 Sek.



Battery life
Batterie Lebensdauer

2 Years
2 Jahre