




HOLZKERN

CLOUDRAKER | SPECIAL EDITION

42 MM

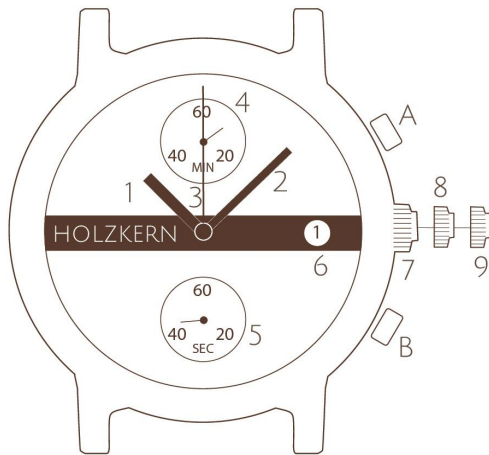

- 1** Hour | Stunde
 - 2** Minute | Minute
 - 3** Stopwatch seconds | Stoppuhr Sekunden
 - 4** Stopwatch minutes | Stoppuhr Minuten
 - 5** Second | Sekunde
 - 6** Date | Datum
 - 7** Normal position | Normalposition
 - 8** 1st click: date setting | 1. Position: Datum einstellen
 - 9** 2nd click: time setting | 2 Position: Zeiteinstellung
- A** Button A | Taste A | stop | Start
B Button B | Taste B | reset | Rücksetzung

Battery | Batterie

SR927SW

Movement | Uhrwerk

Citizen-Miyota 6S11

Case thickness | Gehäusehöhe

12 mm

Circumference | Umfang

Adjustable length | Größenverstellbar

Weight | Gewicht

13 g

Glass | Glas

Hardened mineral crystal | Mineralglas

Backplate | Rückseite Gehäuse

Metal | Metall

Water resistance | Wassersäule

Splash-proof | Spritzwasserfest

Band width | Armbandbreite

20 mm

Band | Armband

Metal, wood | Metall, Holz

Screws | Schrauben

Stopwatch

This watch includes a stopwatch function which you can start and stop by pressing button A, and reset with button B.

You can adjust the second hand when using the stopwatch function by pulling the crown out two clicks (until the clock stops), then use buttons A and B to adjust the hand.

Stoppuhr

In diesem Modell ist eine Stoppuhr integriert, welche sich mit der Taste A starten und anhalten und mit der Taste B zurückstellen lässt.

Den Sekundenzeiger der Stoppuhr kannst du einstellen, indem du die Krone 2x herausziehst bis die Uhr komplett stillsteht. Nun kannst du mit den beiden Tasten A und B den Zeiger verstellen.

Instructions Band Anleitung Armband

EN: www.holzkern.com/en/faq/#size

DE: www.holzkern.com/de/faq/#size



**Accuracy/Month
Genauigkeit/Monat**

± 20 sec.
± 20 Sek.



**Battery life
Batterie Lebensdauer**

2 Years
2 Jahre