




DE | EN |

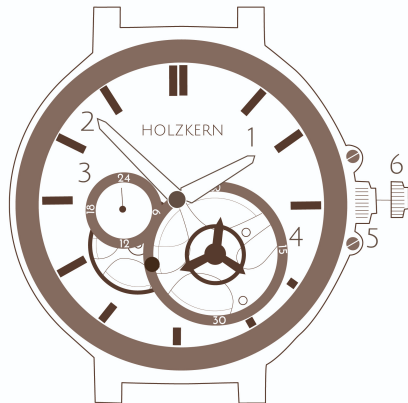

- 1 Hour | Stunde
- 2 Minute | Minute
- 3 24-hour hand | 24-Stundenzeiger
- 4 Second | Sekunde
- 5 Normal position | Normalposition
- 6 1st click | 1. Position

Movement | Uhrwerk

Automatic movement | Automatikuhrwerk
Citizen-Miyota 82S7

Water resistance | Wassersäule

Splash-proof | Spritzwasserfest

Glass | Glas

Sapphire crystal | Saphirglas

Case thickness | Gehäusehöhe

12,8 mm

Weight | Gewicht

127 g

Caseback | Rückseite Gehäuse

Metal, wood, glass | Metall, Holz, Glas

Circumference | Umfang

Adjustable length | Größenverstellbar

Band width | Armbandbreite

20 mm

Band | Armband

Wood, metal | Holz, Metall

Closure | Verschluss

Deployant clasp with fine adjustment |
Klappverschluss mit Feineinstellung

FAQ

EN: www.holz kern.com/en/faq/

DE: www.holz kern.com/de/faq/

ES: www.holz kern.com/es/faq/

IT: www.holz kern.com/it/faq/

FR: www.holz kern.com/fr/faq/

NL: www.holz kern.com/nl/faq/

DA: www.holz kern.com/da/faq/




Accuracy/day
Genauigkeit/Tag

± 20 sec.
± 20 Sek.



Running time
Laufzeit

42 Hours
42 Stunden

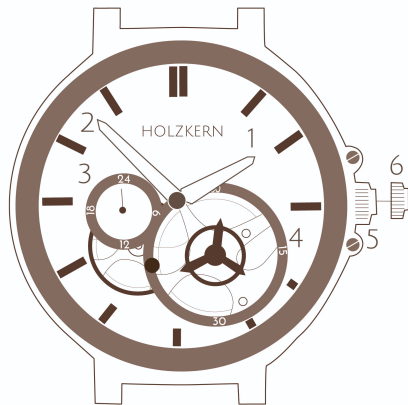

- 1 Hour | Stunde
- 2 Minute | Minute
- 3 24-hour hand | 24-Stundenzeiger
- 4 Second | Sekunde
- 5 Normal position | Normalposition
- 6 1st click | 1. Position

Winding the watch

Wind the movement by turning the crown clockwise 40 times prior to wearing it. The movement will also wind automatically through regular use; however, after many hours without being worn it may be necessary to wind the movement again.

Setting the time

You can adjust the time by turning the crown in position one.

Setting 24h hand

For the correct time at the 24h-hand make sure that you set the time in AM or PM. If it isn't correct, turn the crown 12h clockwise.

Uhr aufziehen

Drehe die Krone 40 Mal im Uhrzeigersinn, bevor du deine Uhr zum ersten Mal anlegst und sie beginnt zu laufen. Das Uhrwerk zieht sich nun durch deine Bewegung selbstständig auf. Sollte die Uhr mehr als 40 Stunden nicht getragen werden, wiederhole den Vorgang.

Uhrzeit einstellen

Du kannst an der herausgezogenen Krone durch Drehen die korrekte Uhrzeit einstellen.

24h Zeiger einstellen

Um die korrekte Zeit der 24h Anzeige einzustellen, gehe sicher, dass du die Zeit richtig Vormittags oder Nachmittags einstellst. Wenn die Anzeige nicht stimmt, drehe die Uhrzeit 12h vor.



Accuracy/Day
Genauigkeit/Tag

± 20 sec.
± 20 Sek.



Running time
Laufzeit

42 Hours
42 Stunden